ASSEMBLY INSTRUCTION


MODEL : SUNNYSIDE PANEL

Please read these instructions carefully before assembling. Follow them step by step.

REQUIRED ASSEMBLY TOOLS:
SCREWDRIVER - 1PC




PART LIST

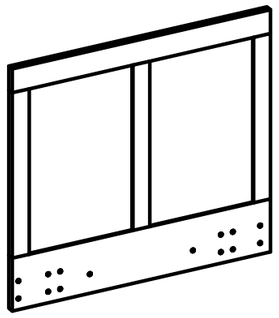

(5) HEADBOARD X 1 PC (Inside carton 1 of 4)




(1) HEADBOARD / FOOTBOARD LEG X 4 PCS (Inside carton 3 of 4)

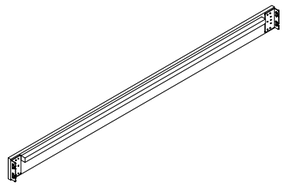


(2) SIDE RAIL X 2 PCS (Inside carton 3 of 4)




(3) CENTER SUPPORT X 4 PCS (Inside carton 3 of 4)

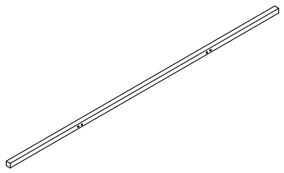

(4) CENTRE SLAT X 2 PCS (Inside carton 3 of 4)

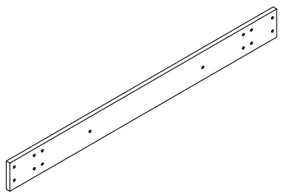

(6) FOOTBOARD X 1 PC (Inside carton 2 of 4)

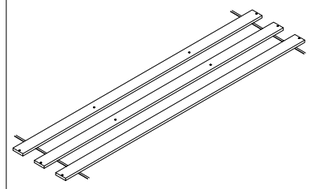

(7) LVL SLAT X 1 SET (Inside carton 4 of 4)



(A) M6 X 35MM JCBC SCREW - 16 PCS





(G) SPRING WASHER M6 - 16 PCS



(L) ALLEN KEY M4 - 1 PC

STEP 1

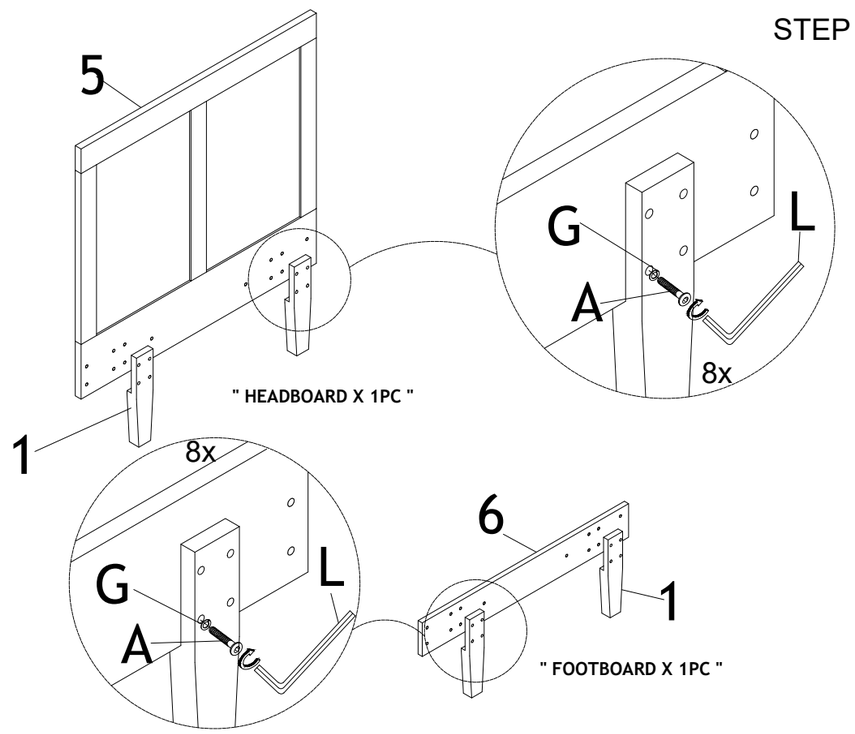



(D) M8 X 20MM JCBB SCREW - 8 PCS



(H) FLAT WASHER M8 - 8 PCS




(I) SPRING WASHER M8 - 8 PCS



(M) ALLEN KEY M5 - 1 PC

STEP 2

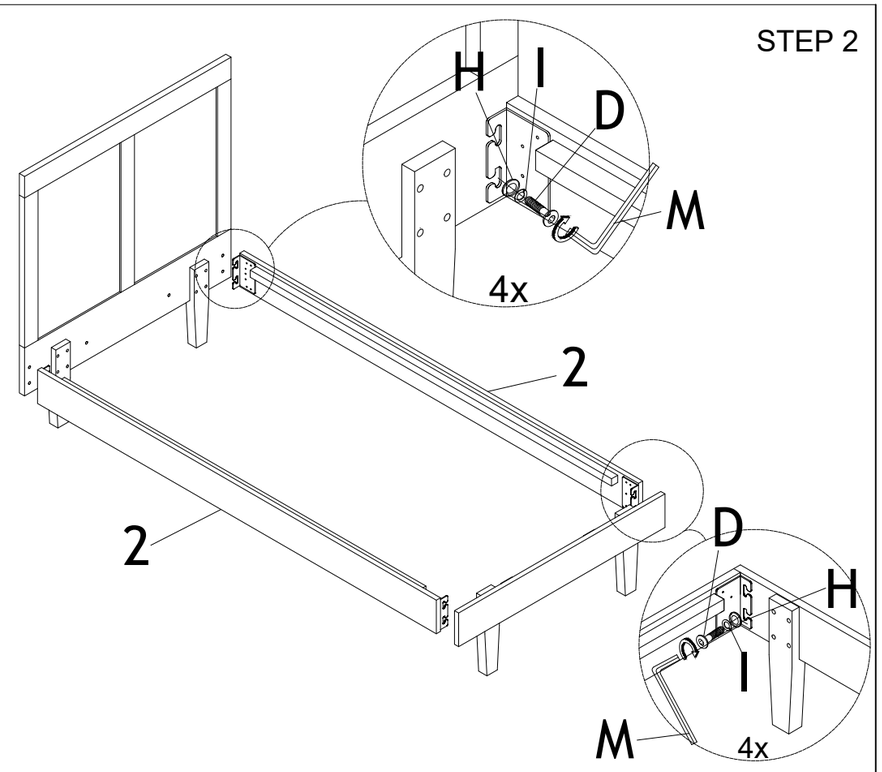



(B) M6 X 20MM JCBC SCREW - 4 PCS



(J) L BRACKET - 4 PCS



(C) M6 X 15MM JCBC SCREW - 4 PCS




(L) ALLEN KEY M4 - 1 PC



(F) FLAT WASHER M6 - 8 PCS

STEP 3

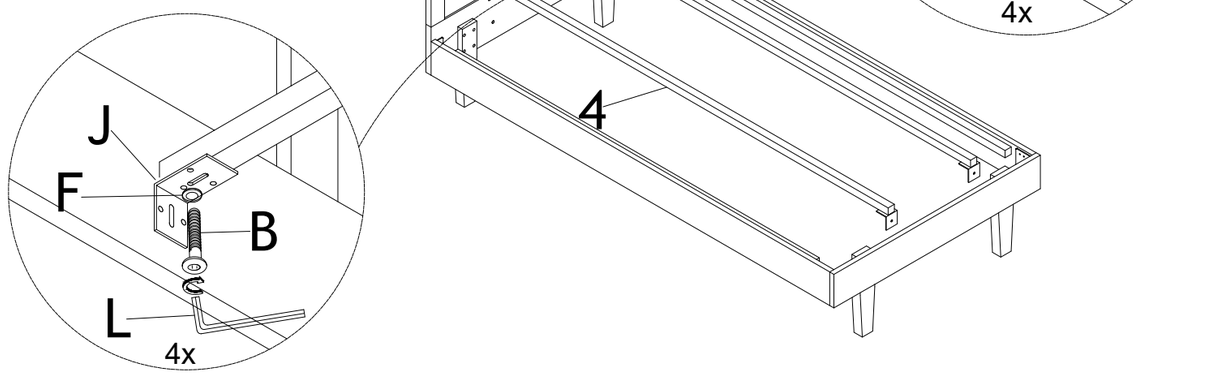

ASSEMBLY INSTRUCTION

MODEL : SUNNYSIDE PANEL

Please read these instructions carefully before assembling. Follow them step by step.

REQUIRED ASSEMBLY TOOLS:
SCREWDRIVER - 1PC





(A) M6 X 35MM JCBC SCREW - 8 PCS



(G) SPRING WASHER M6 - 8 PCS




(K) ADJUSTER - 4 PCS



(L) ALLEN KEY M4 - 1 PC


STEP 4

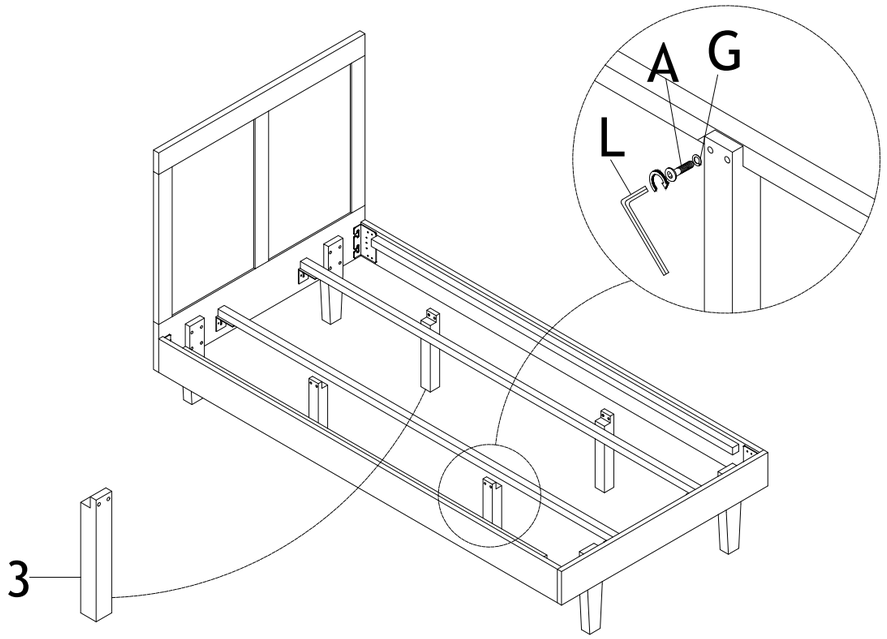



(E) CSK SCREW 32MM - 40 PCS

STEP 5

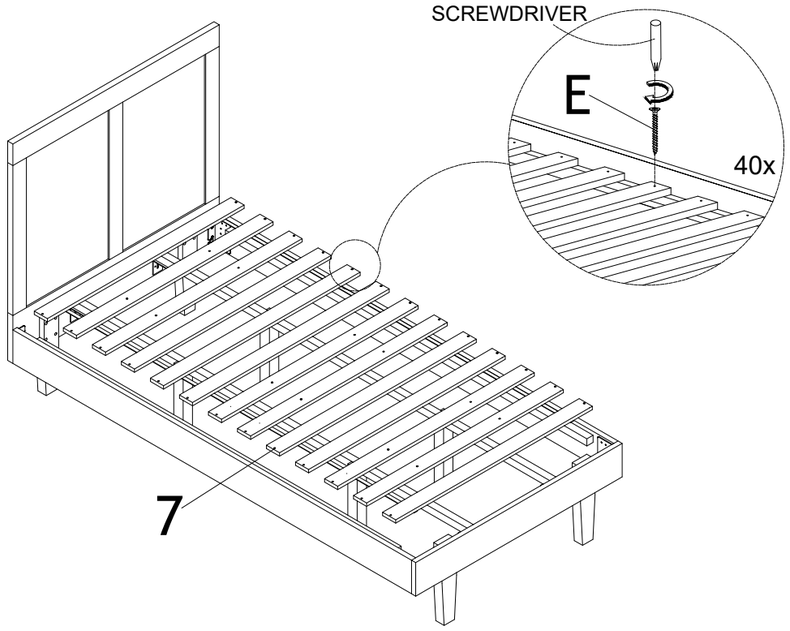

COMPLETED

