
ASSEMBLY INSTRUCTION

MODEL : WALLINGFORD HORIZON

Please read these instructions carefully before assembling. Follow them step by step.


REQUIRED ASSEMBLY TOOLS:
SCREWDRIVER - 1PC



HARDWARE LIST




(G) SPRING WASHER M6 - 12PCS



(N) WOOD DOWEL M10 X 30MM - 6PCS




(O) JCBC SCREW M6 X 60MM - 8PCS



(P) JCBC SCREW M6 X 40MM - 12PCS

***REMARK: After assembly you may find an extra 8 pcs of JCBC screw M6×35mm in Carton 3 of 4 , which are not required for this bed.**

PART LIST

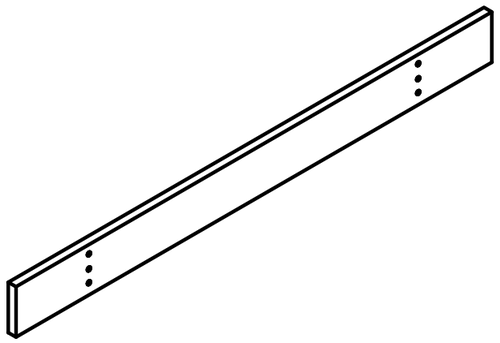

(5) HEADBOARD X 4 PCS (Inside carton 1 of 4)

FRONT VIEW




BACK VIEW



(8) HEADBOARD BACK SUPPORT X 2 PCS (Inside carton 1 of 4)



(1) HEADBOARD / FOOTBOARD LEG X 4 PCS (Inside carton 3 of 4)

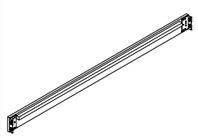


(2) SIDE RAIL X 2 PCS (Inside carton 3 of 4)




(3) CENTER SUPPORT X 4 PCS (Inside carton 3 of 4)



(4) CENTRE SLAT X 2 PCS (Inside carton 3 of 4)

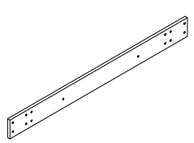

(6) FOOTBOARD X 1 PC (Inside carton 2 of 4)

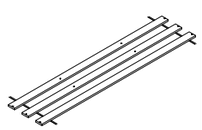

(7) LVL SLAT X 1 SET (Inside carton 4 of 4)

STEP 1



(P) M6 X 40MM JCBC SCREW - 12 PCS




(N) WOOD DOWEL M10 X 30MM - 6 PCS



(G) SPRING WASHER M6 - 12 PCS



(L) ALLEN KEY M4 - 1 PC

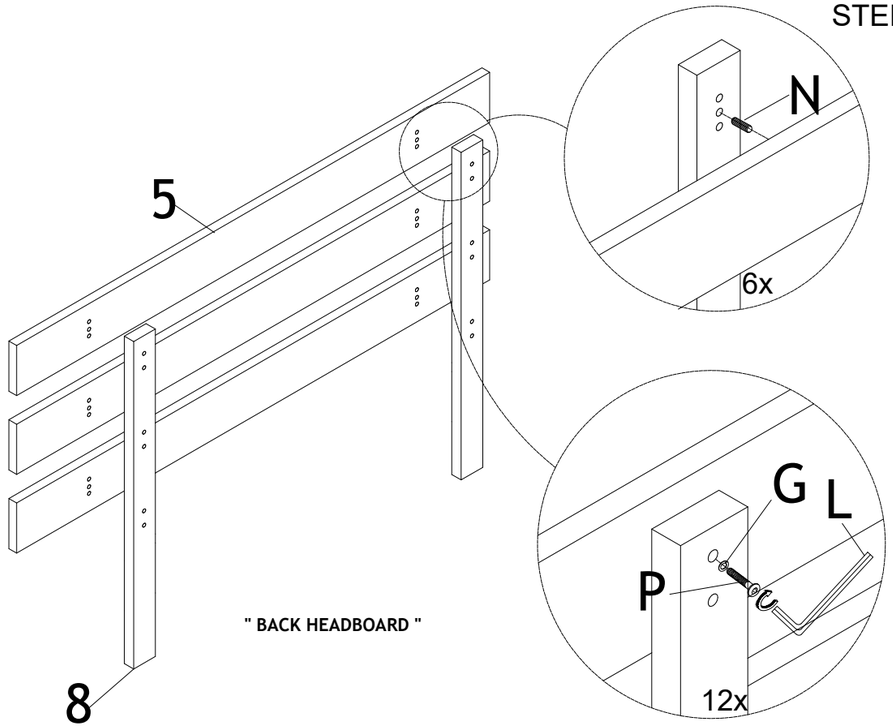

STEP 2



(A) M6 X 35MM JCBC SCREW - 8 PCS




(G) SPRING WASHER M6 - 16 PCS



(L) ALLEN KEY M4 - 1 PC



(O) M6 X 60MM JCBC SCREW - 8 PCS

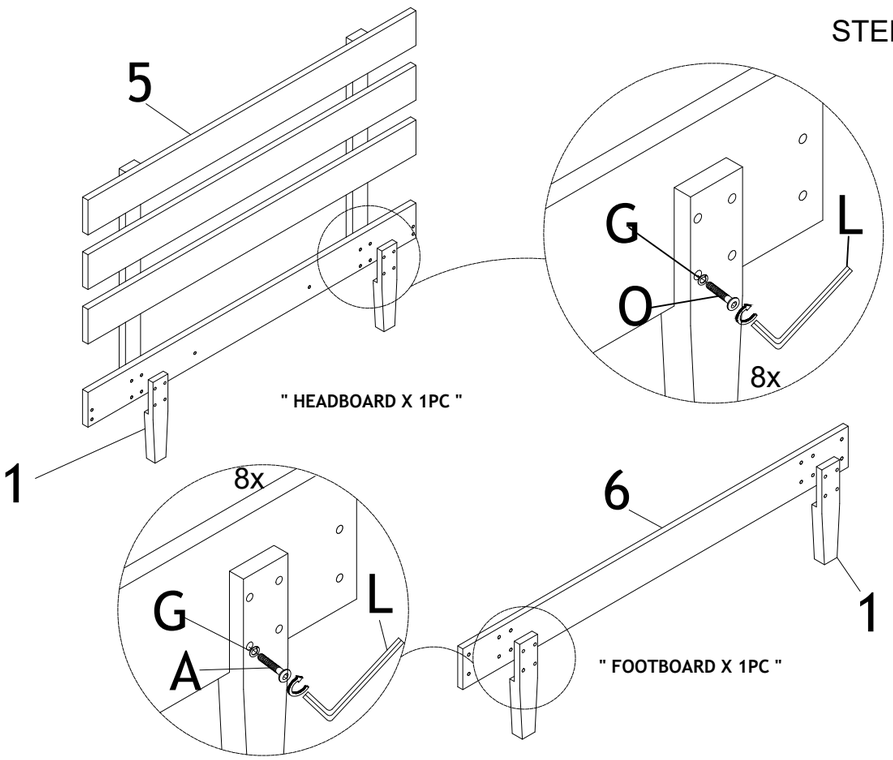

ASSEMBLY INSTRUCTION


MODEL : WALLINGFORD HORIZON

Please read these instructions carefully before assembling. Follow them step by step.

REQUIRED ASSEMBLY TOOLS:
SCREWDRIVER - 1PC



STEP 3



(D) M8 X 20MM JCBB SCREW - 8 PCS




(H) FLAT WASHER M8 - 8 PCS



(I) SPRING WASHER M8 - 8 PCS



(M) ALLEN KEY M5 - 1 PC

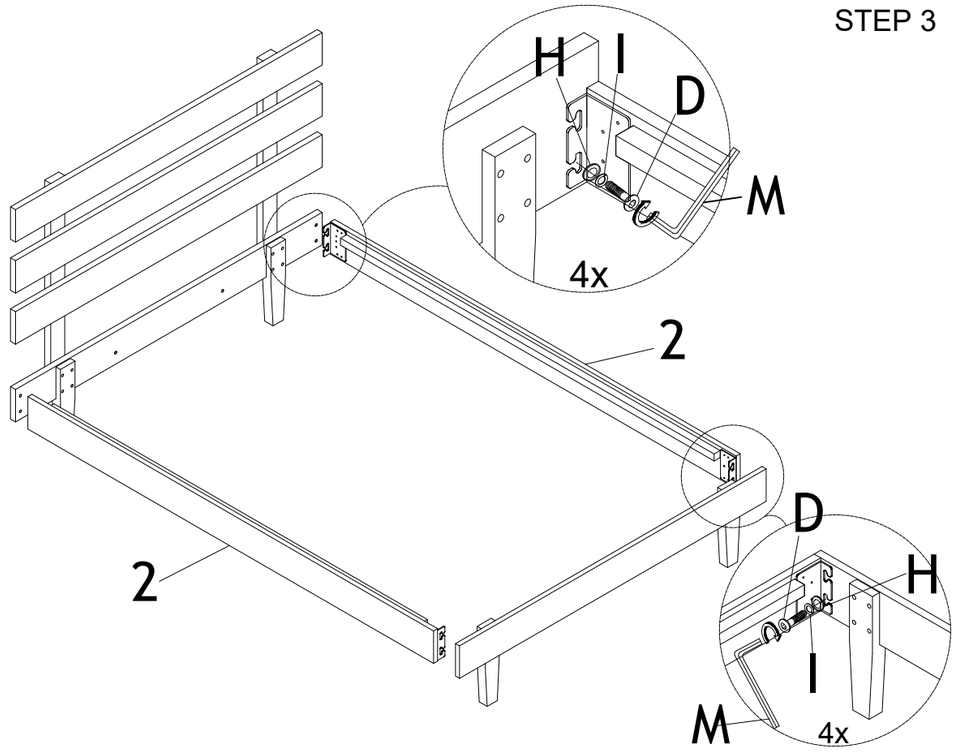

STEP 5



(A) M6 X 35MM JCBC SCREW - 8 PCS




(G) SPRING WASHER M6 - 8 PCS



(K) ADJUSTER - 4 PCS



(L) ALLEN KEY M4 - 1 PC

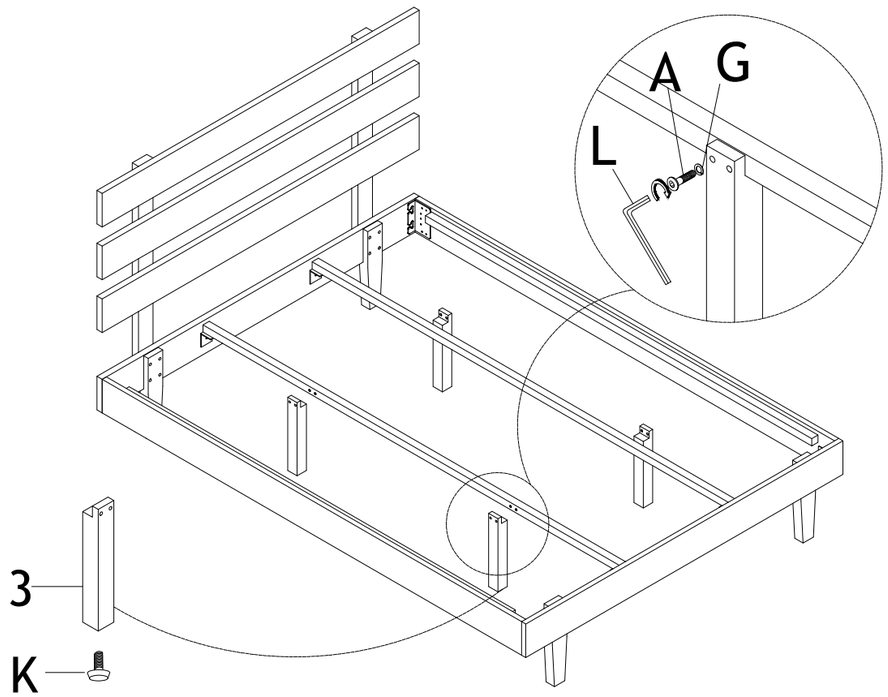

STEP 4



(B) M6 X 20MM JCBC SCREW - 4 PCS



(J) L BRACKET - 4 PCS



(C) M6 X 15MM JCBC SCREW - 4 PCS



(L) ALLEN KEY M4 - 1 PC



(F) FLAT WASHER M6 - 8 PCS

STEP 6



(E) CSK SCREW 32MM - 40 PCS

